


# PCR amplification – Bead carryover

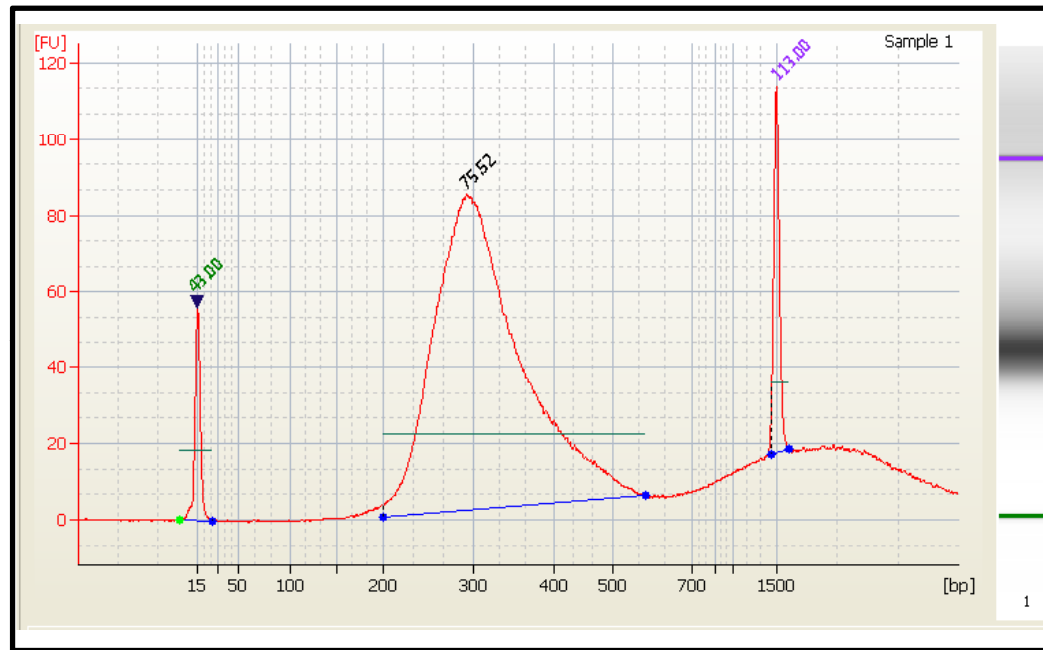

**Cause** : SPRI bead carryover from post-PCR clean-up step. Use a strong magnet for bead separation and pipette carefully during elution to avoid disturbing beads.